

TT135 | 7" Freedom Mount™ Windshield / Dash / Console Mount for Tomtom GPS

Compatible with:

- Tomtom One - 1st, 2nd, & 3rd Editions
- Tomtom One (UK version)
- Tomtom One XL - 1st, 2nd, & 3rd Editions
- Tomtom One XL-S - 1st, 2nd, & 3rd Editions
- Tomtom GO 520 / 720 / 920 / 920T
- Tomtom GO 300 / 500 / 700



CM027-2
for GO 300, 500, & 700
without dual-T plate



APTTO
for Tomtom One



APTTOXL
for Tomtom One XL
and Tomtom One XL-S




APTTGO520
for Tomtom GO 520,
720, 920, and 920T



AP036


Windshield Installation

- Step 1. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.

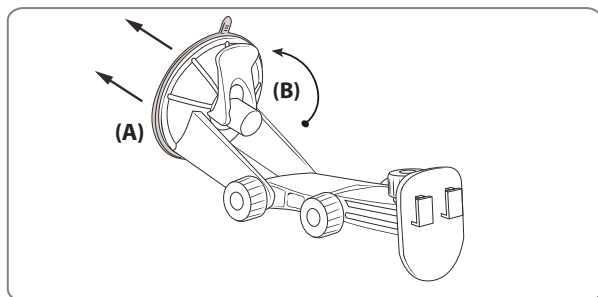


Dash Installation

- Step 1. Locate a safe flat surface on the dash or console to mount the pedestal. Clean the dash with the alcohol pad provided. Let the dash surface dry before applying the adhesive disc (C).
- Step 2. Push the pedestal suction cup (A) firmly to the disc (C). Flip the lever (B) down to secure the suction cup.

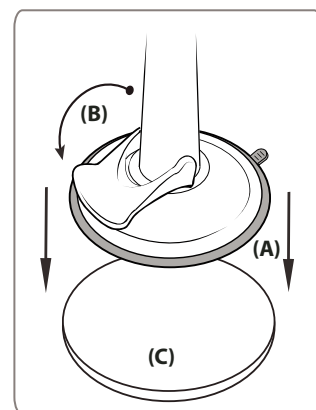


Tomtom One, One XL, and One XL-S Mount Installation Pedestal Adjustment and Device Adapter Plate Installation

- Step 1. Adjust the arm angle and the pedestal head by tightening the adjustment knobs. (D)
- Step 2. Attach the adapter plate to the back of the device. Attach the device and plate to the pedestal by inserting the dual T-Tabs of the pedestal (E) into the dual T-slots of the adapter plate. (F)

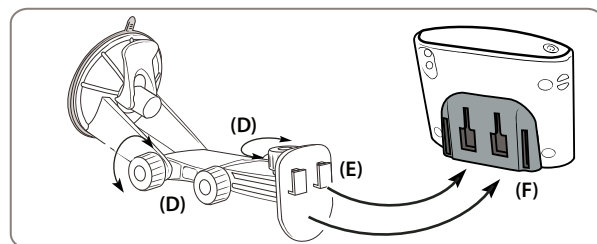


Instructions for APTTGO520 Adapter Plate

- Step 1. Attach the adapter plate by sliding it up into the slot on the back of the Tomtom GO 520, 720, 920, or 920T device as shown above.
- Step 2. Follow step 2 from *Pedestal Adjustment and Device Adapter Plate Installation* above.

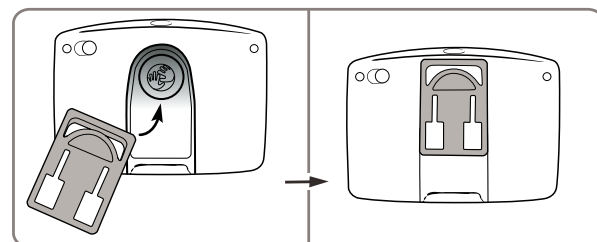

Instructions for GO 300, 500, and 700 adapter plate

- Step 1. Remove the tightening nut and screw to remove the dual-T plate head. Insert the mounting arm into the Tomtom GO 300, 500, or 700 adapter (not included). Attach the device to the adapter plate.

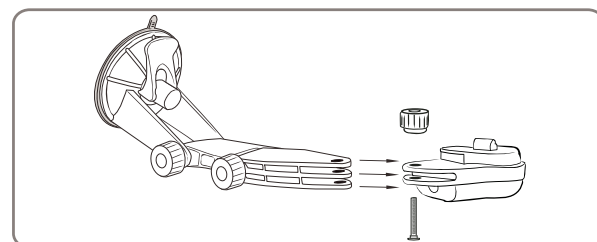

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:
(USA) (800) 841-0884
(INT'L) (626) 254-9005
Mon-Fri. 9am-5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.